



# Econoflo SXT Twin Tank Water Softener

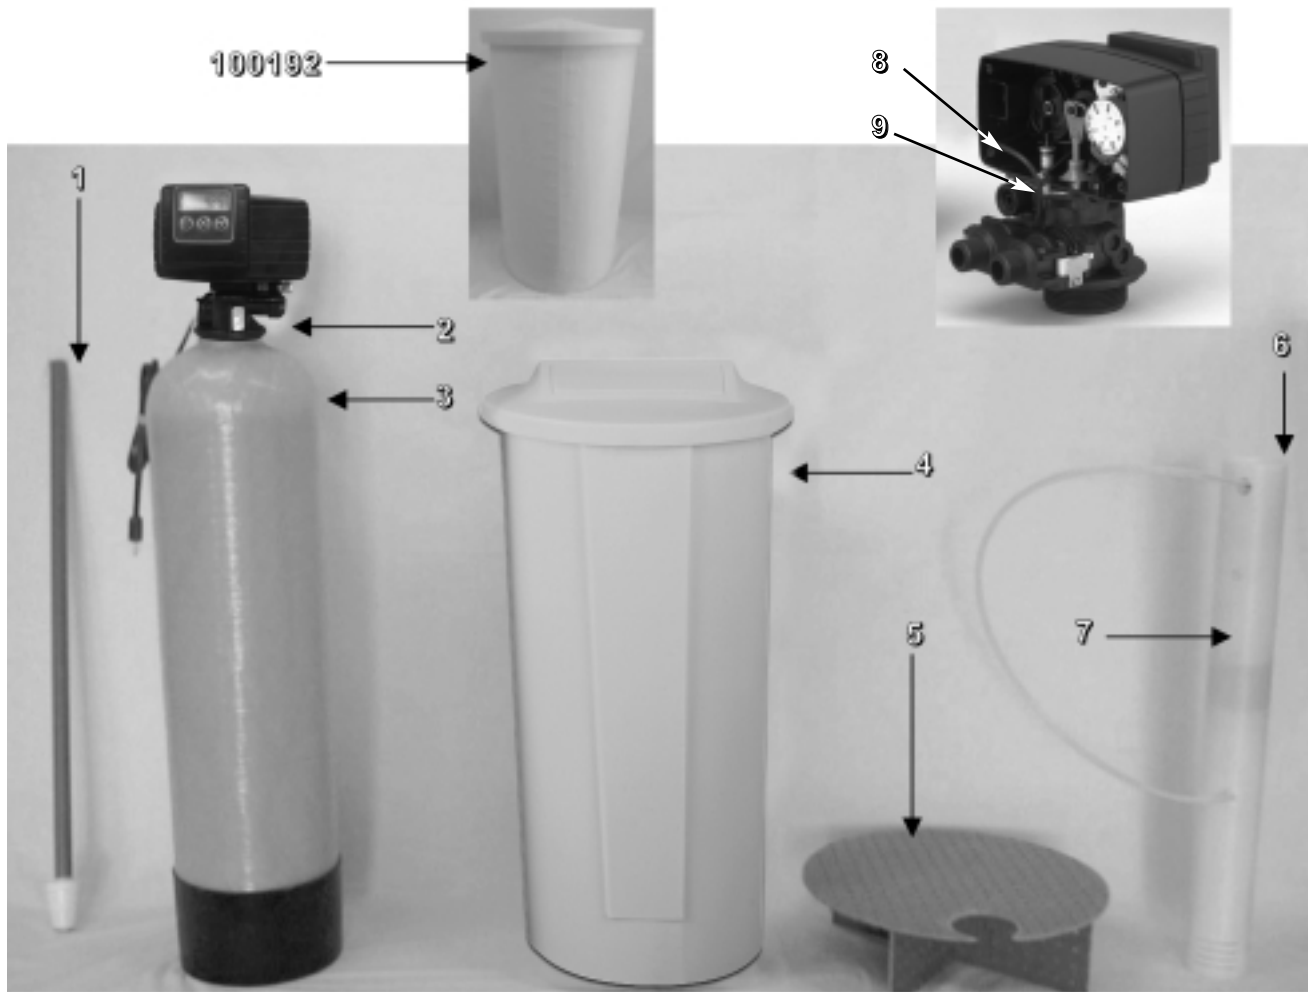

Part No.	Model Description	Distributor (1)	Valve (2)	Tank (3)	Brine Tank (4)	Grid (5)	Safety Float (7)	Resin #21501
2102	EFT20SXT	19495	56019-61	19354	100283	NA	13624	0.75 CF
2103	EFT30SXT	19495	56019-87	110354	100283	NA	13624	1.00 CF
2104	EFT40SXT	19478	56019-88	110474	100283	NA	13624	1.25 CF
2105	EFT60SXT	19477	56019-63	112524	100192	19710	13624	2.00 CF
2106	EFT90SXT	60098	56019-64	114651	100192	95009-21	13624	3.00 CF


## Common Components

Item No.	Part No.	Description
6	48004	Brine Well Cap
8	19791-01	Meter Cable
9	60026	Meter
10	60049	Bypass

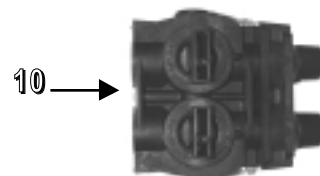

Unit 2106 includes a CPVC tank adapter - Part No. 81041  
 Distributor 60098 includes hub and laterals

# Econoflo SXT Cabinet/Twin Tank - 5600SXT Powerhead

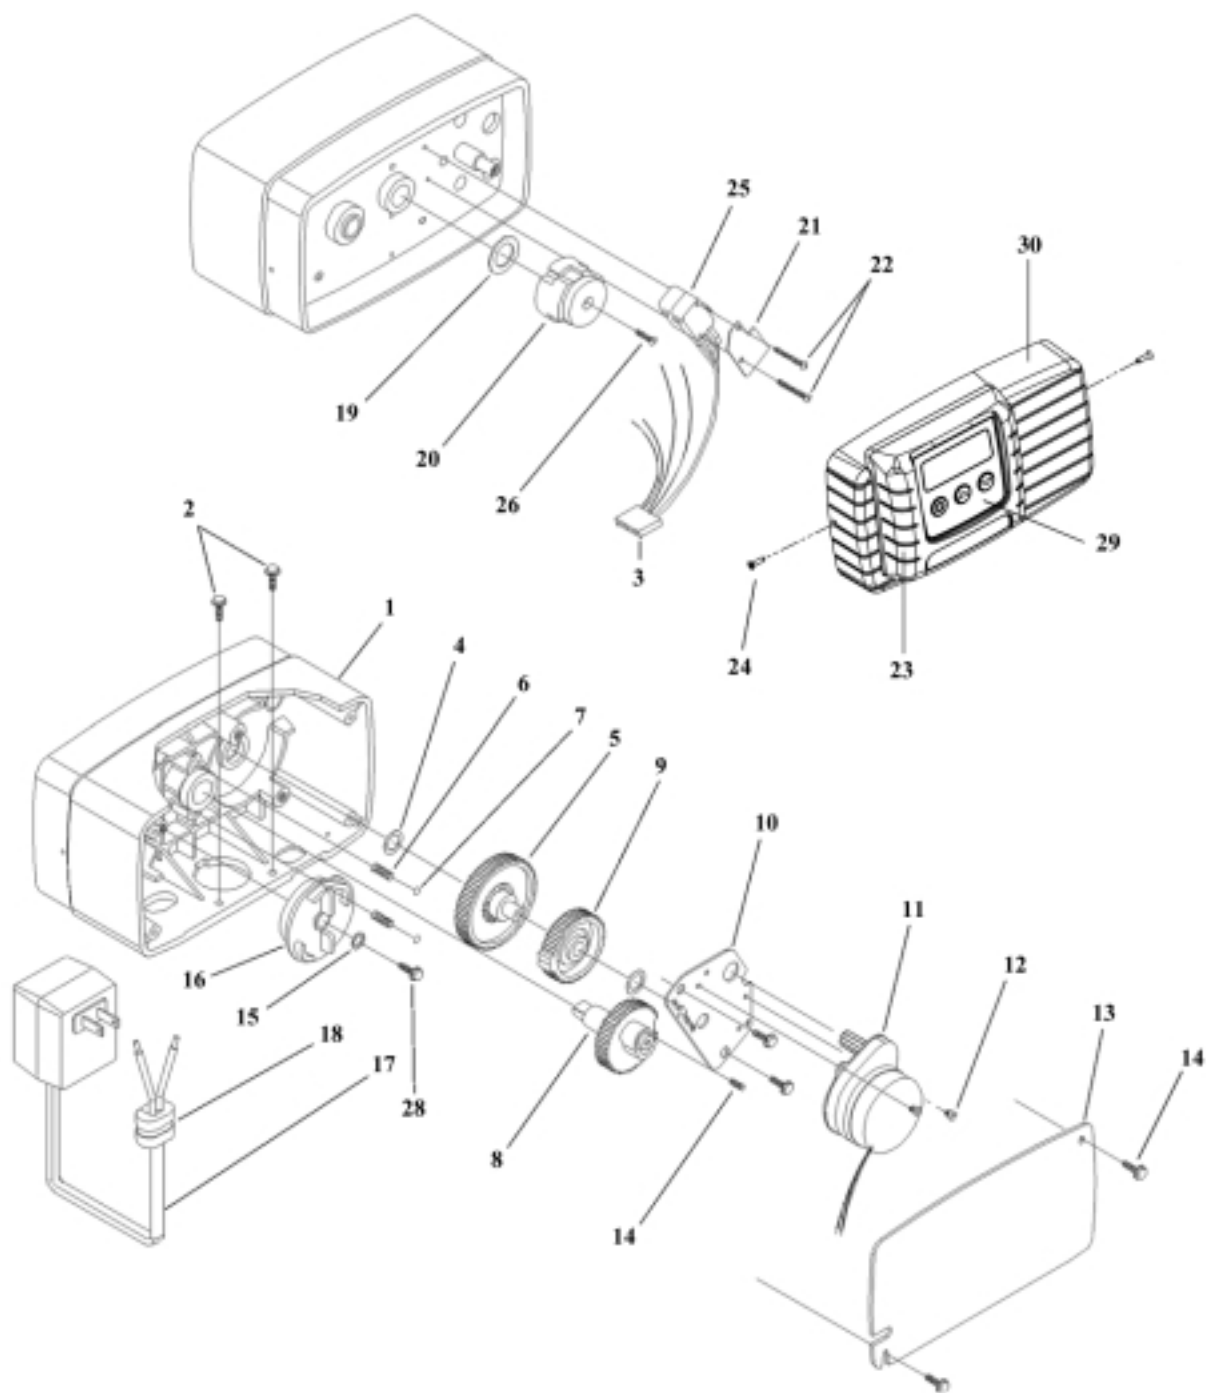


# Econoflo SXT Cabinet/Twin Tank - 5600SXT Powerhead

---

<u>Item No.</u>	<u>Qty Req'd</u>	<u>Part No.</u>	<u>Description</u>
1	1	26001-02	drive housing, black
2	2	12473	screw, drive mount
3	1	19474	wire harness, power
4	1	13299	spring washer
5	1	13017	idler gear
6	2	19080	spring, detent
7	2	13300	ball, detent
8	1	25005-10	main drive gear and shaft (downflow brining, black)
9	1	23045	drive gear
10	1	13175	motor mounting plate
11	1	16944	drive motor, 2RPM 24V 50/60 Hz
12	3	11384	screw, motor
13	1	13229	back plate
14	4	13296	screw, component
15	1	12037	washer
16	1	18722	cam, brine valve
17	1	19674	transformer, 24V 9.6VA (US 120V)
18	1	13547	strain relief
19	1	19079	washer, friction
20	1	17438	cycle cam (downflow brining, black, single backwash)
21	1	10302	insulator
22	2	17876	screw, microswitch
23	1	42635-01	front cover
24	2	13898	screw, front panel
25	2	10218	microswitch
26	1	15151	screw, cycle cam
27	4	12681	wire nut, beige (not shown)
28	1	040214	screw
29	1	42637	label, display, 5600SXT
30	1	19472-02	housing, circuit board
-	1	42766-02	circuit board, SXT

---

# Econoflo SXT Cabinet/Twin Tank - 5600SXT Control Valve

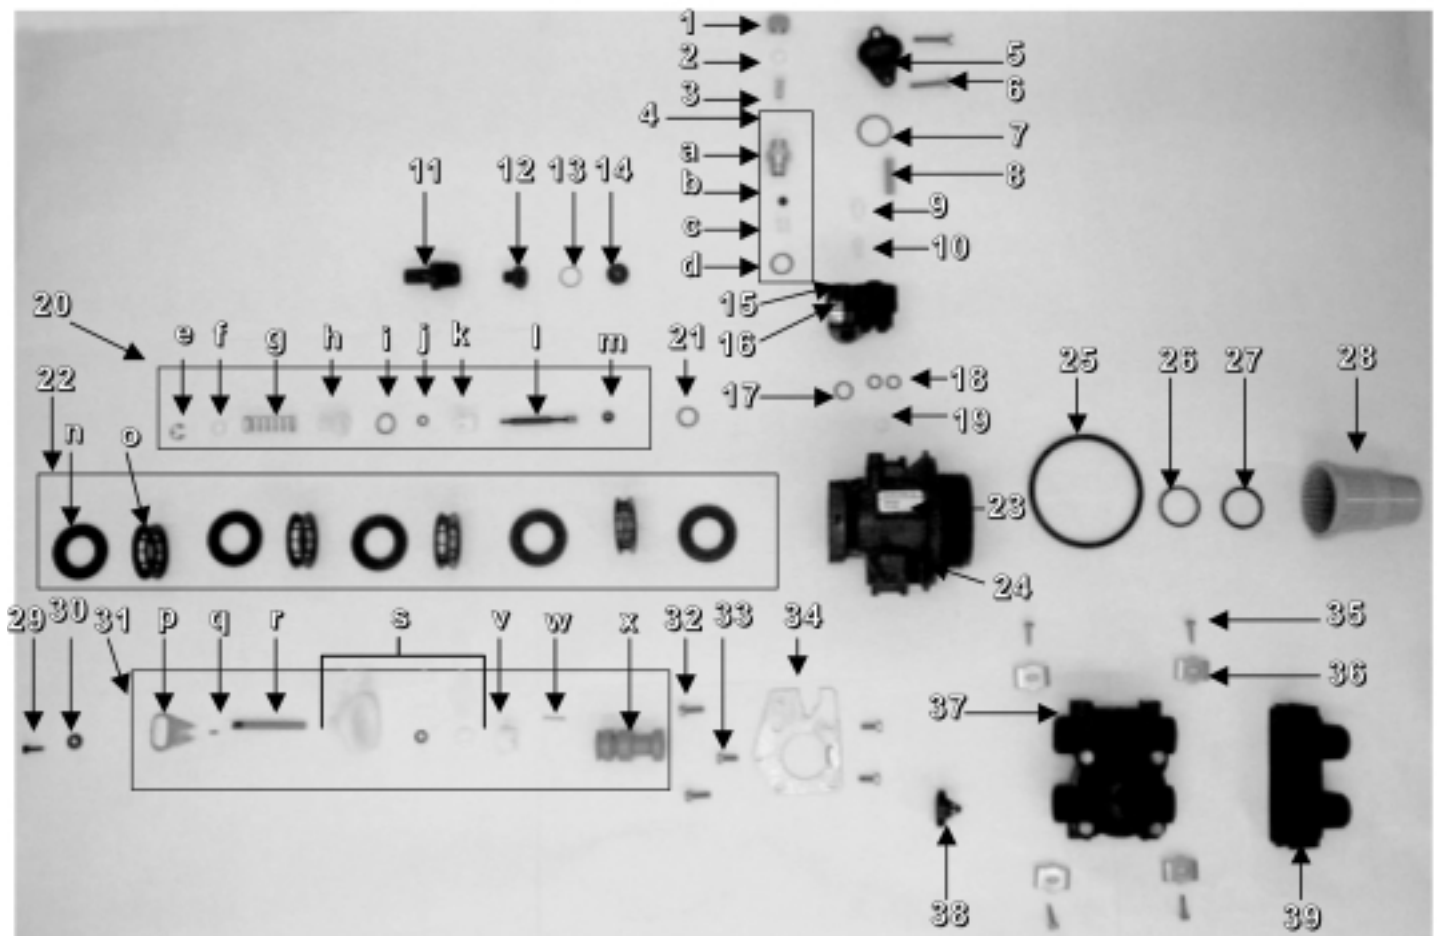

# Econoflo SXT Cabinet/Twin Tank - 5600SXT Control Valve

Item No.	Qty Req'd	Part No.	Description	Item No.	Qty Req'd	Part No.	Description
1	1	10329	3/8" Brass Nut	21	1	13302	O-Ring
2	1	10330	Delrin Sleeve	22	1	13976	Seal & Spacer Assembly
3	1	10332	Brass Insert	n	5	13242	Main Seals
4	1	19402	Control .25 Refill	o	4	14241	Spacers
a	1	13244	BLFC Adapter	23	1	13333	Injector Label
b	1	12094	0.25 GPM Flow Washer	24	1	19700-10	Valve Body
c	1	13245	BLFC Button Retainer	25	1	12281	O-Ring
d	1	12977	O-Ring	26	1	13304	O-Ring
5	1	13166	Injector Cover	27	1	13030	Distributor Tube
6	2	13315	Screws	28	1	18280	Cone
7	1	13303	O-Ring	29	1	13296	Screw
8	1	10227	Injector Screen	30	1	13363	Plain Washer
9	1	10913-1	White Injector Nozzle	31	1	13975	Piston Assembly
10	1	10914-1	White Injector Throat	p	1	13003	Piston Rod Link
11	1	13308	Black Hose Barb	q	1	13306	Roll Pin
12	1	13173	DLFC Button Retainer	r	1	13002	Piston Rod
13	1	15348	O-Ring	s	1	13446	End Plug Assembly
14	1	12086	1.50 GPM Flow Washer	v	1	12953	Piston Rod Retainer
	1	12087	2.00 GPM Flow Washer	w	1	10696	Piston Pin
15	1	13163	Injector Body	x	1	13247	Piston
16	1	12128	BLFC Label, 0.25 GPM	32	2	12473	Screws
17	1	12638	O-Ring	33	3	12112	Screws
18	2	13301	O-Ring	34	1	13546	End Plug Retainer
19	1	13497	Air Disperser	35	4	13314	Screws
20	1	13977	Brine Valve Assembly	36	4	13255	Mounting Clip
e	1	11981-01	Retaining Ring	37	1	60086	Meter
f	1	16098	Brine Washer, Nylon	38	1	14613	Flow Straightener
g	1	11973	BV Spring	39	1	18706-02	3/4" Plastic Yoke
h	1	13165	Brine Valve Cap				
i	1	13302	O-Ring				
j	1	12550	Quad Ring				
k	1	13167	Brine Valve Spacer				
l	1	13172	Brine Valve Stem				
m	1	12626	Brine Valve Seat				